

# These are a few of your Favorite Things!



## - The "Scenes" Page

Next to the **"Timer"** icon, at the bottom right of the screen, is the **"Scenes"** icon.

**"Scenes"** are the programs you have "Saved" for easier access. You can save Scenes from the **"Static Colour"** page or from the **"Modes"** page.

Each of these spots is customizable by Name (just click on the existing name for each "Scene" tile and you can rename it).

You can also add a Picture to each "Scene" tile by clicking the camera in the top right corner of each "Scene" tile.

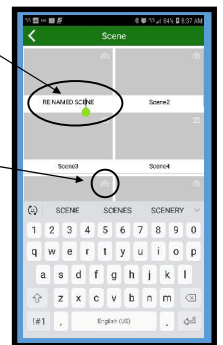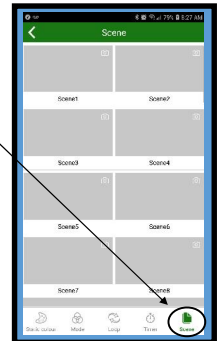

Reminder:

How did you save your favorite **"Static Colours"** & **"Modes"** as one of your favorites?

At the top right corner of the **"Static Colours"** & **"Modes"** pages is the **"Scene Save"** icon. Press it and then select one of the **"Scene"** tiles and then press **"Okay"**.

Now your Colour or your Mode is saved for easy retrieval, in the **"Scene"** menu.

